National Aeronautics
and Space Administration

# Development of a Proton Board-Level Testing Guideline

Steven M. Guertin

Jet Propulsion Laboratory / California Institute of Technology

Pasadena, CA

This work was performed at the Jet Propulsion Laboratory, California Institute of Technology,
Under contract with the National Aeronautics and Space Administration (NASA)

This work was sponsored by the NASA Electronic Parts and Packaging (NEPP) program.

Copyright 2016 California Institute of Technology. Government sponsorship acknowledged.

# Outline

- Background and Motivation
- The Good, the Bad, and the Ugly
- Testing – Guideline Info
- Analysis & Theory
- Future & Recommendations
- Conclusions

# What Guideline?

- People are testing boards, boxes, and other assemblies with protons

- This is of … limited value
- And there are significant ways that tests can be of even less value
- NEPP is developing a proton board-level testing guideline to explore this problem

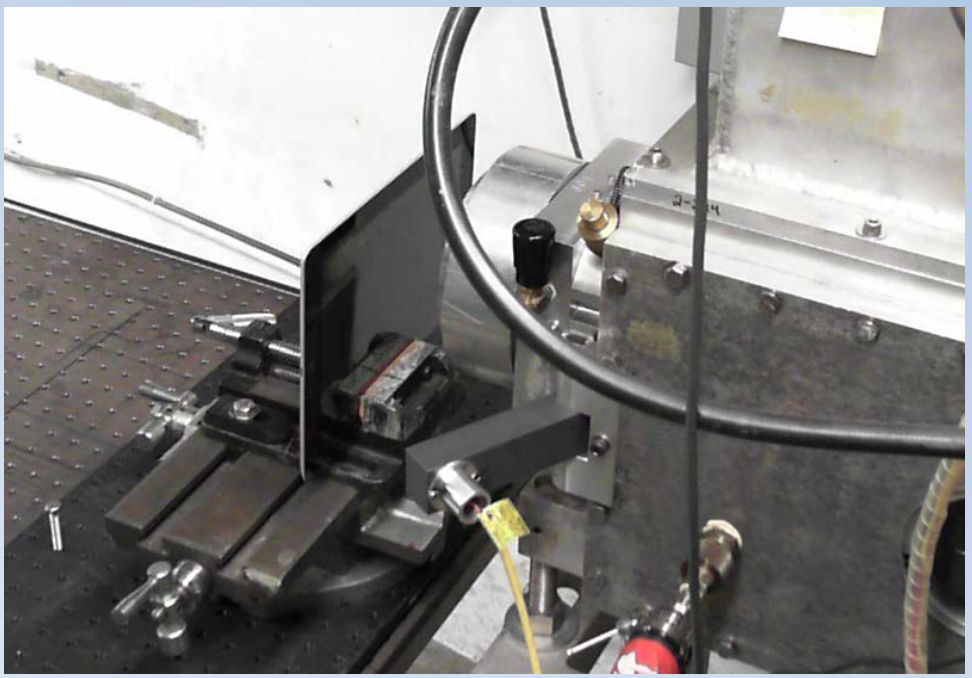

iPad irradiation at UC Davis

- See also the NEPP low-energy proton test guideline: http://radhome.gsfc.nasa.gov/radhome/papers/MRQW2012_Pellish.pdf

# Motivation: Why?

- Single Event Effects are expensive to test
  - Should test with heavy ions
  - Devices must be exposed
- Proton-only testing is being used by…
  - Higher risk NASA missions
  - Aggressive commercial

CubeSats deployed from ISS

# Can Protons Work?

- Protons do (sort-of) simulate the environment
  - Nuclear reactions
  - ISS environment simulated up to a rough cutoff
  - Results can be applied to other environments
    - Understand sensitive volumes (SVs)
    - Environment heavy ions
- But reaction particles are inherently short-ranged

Heimstra, IEEE TNS, 2003 – $1\times10^{10}/cm^2$

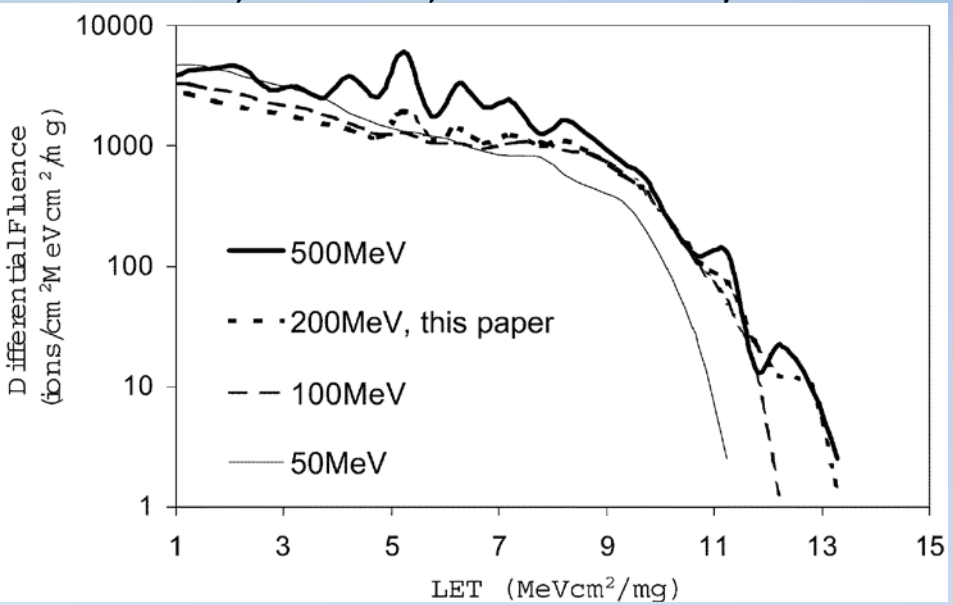


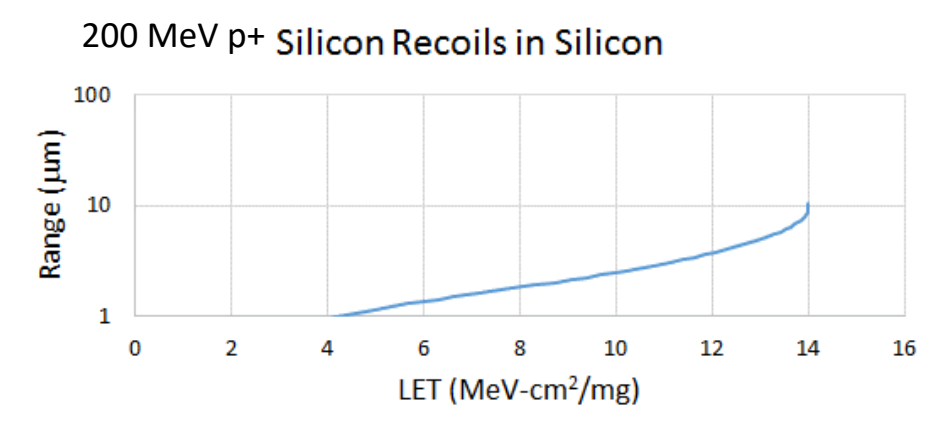

# Protons Have Limitations

- In a 2μm sensitive depth…
  - $1\times10^{10}/cm^2$ 200 MeV Protons
  - More protons can be used
- Proton recoils give energy depositions similar to heavy ions
  - But leave high LET gap
  - More protons weakly affect the gap region
- But not all SEE modes are this shallow
  - More later

Foster, IEEE TNS, 2008 –
energy deposition in 2μm

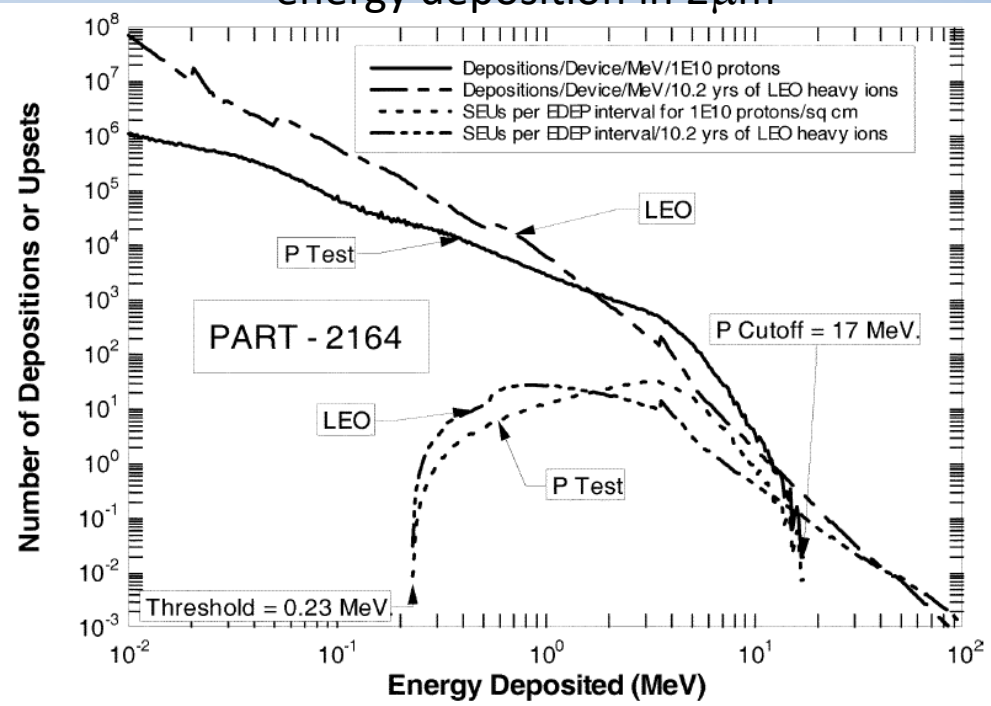

# Protons Have Limitations

- In a 2μm sensitive depth…
  - $1\times10^{10}/cm^2$ 200 MeV Protons
  - More protons can be used
- Proton recoils give energy depositions similar to heavy ions
  - But leave high LET gap
  - More protons weakly affect the gap region
- But not all SEE modes are this shallow
  - More later

Foster, IEEE TNS, 2008 –
energy deposition in 2μm

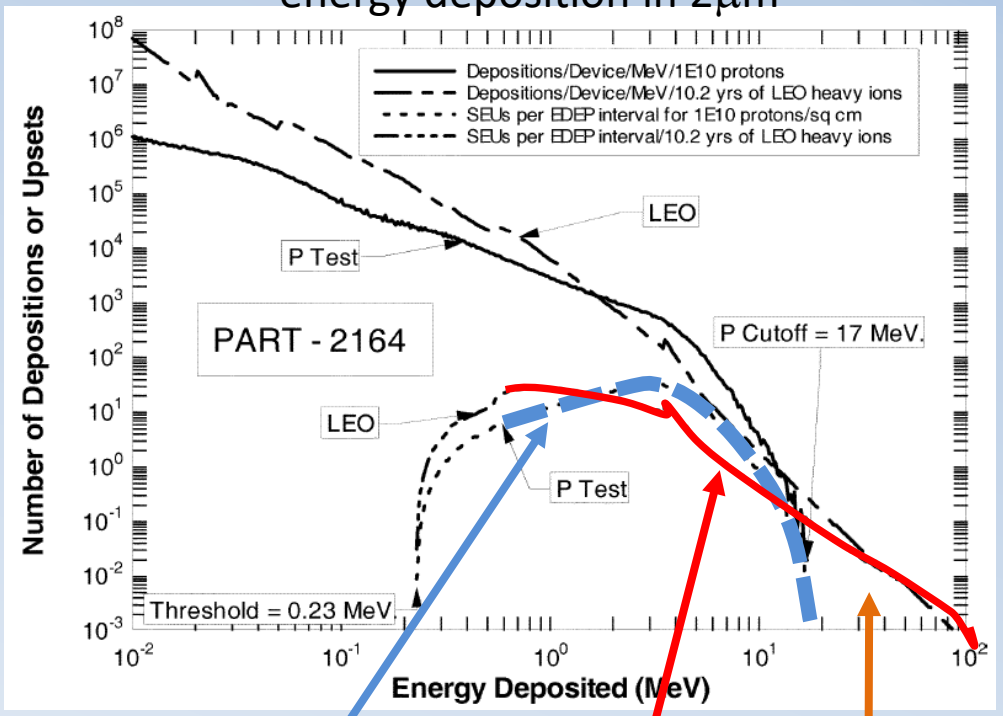


Events during proton testing

Events during 10 year ISS mission

**Gap**

**Similar to LET 14**

# Motivation: Problems

- The space environment is not just protons
- Heavy ions have much higher LETs than proton recoils… and higher deposited energy in sensitive volumes (SVs)
- Heavy ion tests allow exploration of angular sensitivity

- The bottom line is that you're going to miss a bunch of stuff…
- But you are establishing some increased robustness – it just might not be enough

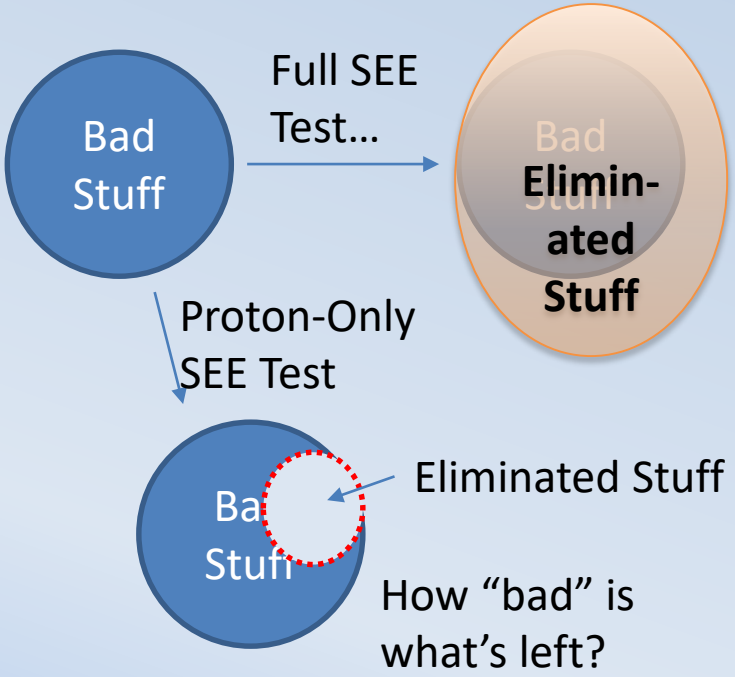

# Motivation: Example

- How bad can the "gap" be – what's missed by a $1\times10^{10}/cm^2$ proton test
- One example bad part is the HM65162 (1985) SRAM

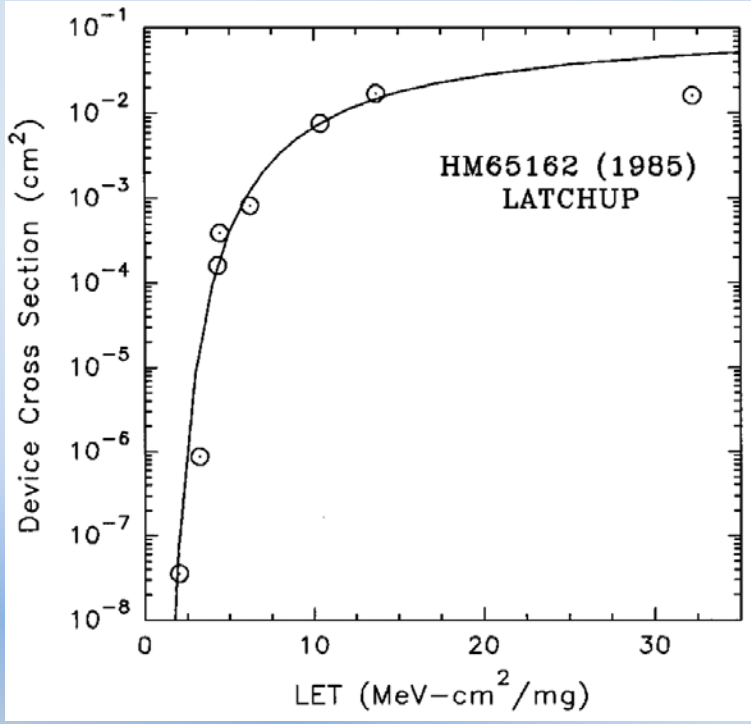


- Has SEL at very low LET
  - Energy cutoff discussed above suggests SEL should be seen
  - Actually has ~40% of no SEL in $1x10^{10}/cm^2$ protons
- ISS SEL rate is about 0.01/device-day
- Similar observation - NEC4464

# Motivation: Future

- Not likely to go away:
  - Package on Package
  - Limited beam penetration on 3D Circuits
  - Heat sinks and thermal management
- Mission design
  - If limitations are understood, design could benefit
- We should establish best practices in the use of proton board-level testing.

# The Good, the Bad, …

- Good
  - Low cost
  - Can test in flight-like situation
  - No testing is really bad, some parts have DSEE @ .1/day
  - It has been used, to some success on ISS missions
  - Bit upsets, SEUs, and SETs are easily caused by proton events, though only a limited subset of them may be observed.
- Bad
  - The SEEs proton testing is worst for, are the worst things:
    - SEL
    - SEB
    - SEGR
  - Ions generated are low(er) Z
  - Ion range limited to ~10μm
  - May be difficult to observe and isolate rare events from test artifacts

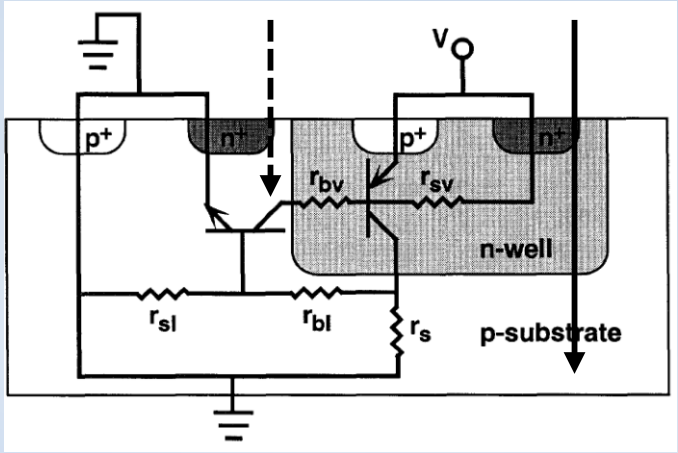


Ladbury, 2015 – SEL requires deep charge collection

# and the Ugly

- But it does work – a little
  - What you're getting is so minimal that a bad test or **misinterpretation could be worse than no test**
- The results are not great
  - At 1e10 fluence, resulting DSEE rate is only constrained to 0.01/day (worst case, due to bad actors) – For ISS orbit
  - 1e11 does much better, but value not quantified yet
- And some theory is frustrating
  - Proton recoils have flat angular distribution
  - If something does happen, you know little about angle

- Most frustrating: It is probably, on-average, much better than the worst-case established…
  - How likely are worst-case devices?

# Scaling & Technology

- Scaling doesn't impact validity of proton SEL tests
- Scaling doesn't really affect the event types with the biggest problems – SEL, SEGR, and SEB
  - These transistors (i.e. power) don't really get scaled
  - Scaling by itself makes SEL worse, but decreasing voltage improves SEL
    - In general, for highly scaled devices, SEL is improving…
- For other SEE types, the reduction in SV size is improving the effectiveness of proton testing
  - Small SVs, low threshold charge

# Testing: Summary

- The guideline is about testing – here's an overview:
  - Planning, exposure level, test device
  - Facilities
  - Preparation
  - Test operation

National Aeronautics
and Space Administration

# Planning

- There are some parts with failure rates around 0.1/device-day in ISS orbit. You're here without test data.
- Test boards must use the same devices as flight units
- With proton testing, 1e10/cm$^2$ results in DSEE rates around 0.01/device-day
  - 1e11/cm2 improves this, but hard numbers are limited
- Must consider exposure level and SEE types
- If possible plan to use two energies to enable use of Bendel 2-parameter

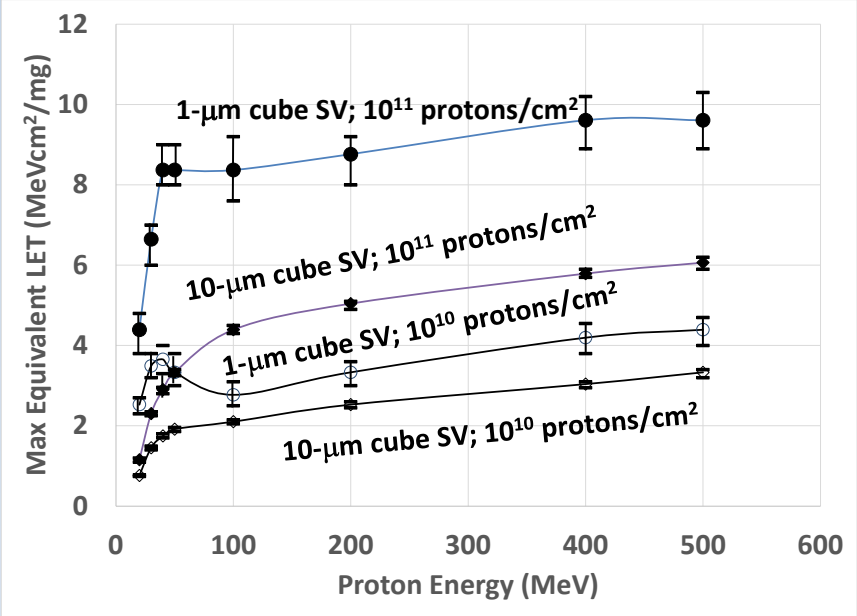


Ladbury, IEEE TNS, 2015

Equivalent LET = Energy / ($\rho$*$d_{SV}$)
Max Equivalent LET requires 2.3 recoils

National Aeronautics
and Space Administration

# Facilities

- For proton-only testing, 200 MeV is heavily desired. (Required to meet claims given in guideline.)

| Facility | Location | Type | Energy, MeV | Availability |
|---|---|---|---|---|
| Tri-University Meson Facility | Vancouver, CAN | Cyclotron | 480 | Ok, but 4x/year |
| Slater Proton Treatment and Research Center at Loma Linda University Medical Center (LLUMC) | Loma Linda, CA | Synchrotron | 250 | 4-8 weeks? |
| Mass General Francis H. Burr Proton Therapy (MGH) | Boston, MA | Cyclotron | 235 | Booking 8 months out |
| NASA Space Radiation Lab (NSRL) | Brookhaven, NY | Synchrotron | 2500 | Ok, but $$ |

- Ideally, synchrotrons would be avoided due to beam structure impact on testing
- Other proton facilities are available, but require direct communication/discussion for each user

# Preparation

- Test boards/equipment
  - Remove bulky heatsinks
  - Remove/don't install shielding (we're not testing the shielding predictions)
  - Limit beam exposure of any non-test equipment
- Work with facility regarding shipping – especially to Canada
- During exposure, all items in the beam will be exposed to TID
  - Generally, TID levels over 3 krad(Si) are likely to cause problems with boards (but it could happen lower) – **Be careful of unit TID limits!**
  - $1\times10^{12}/cm^2$ would be best for a proton test, but $1\times10^{11}/cm^2$ might be a reasonable compromise.
    - $1\times10^{12}/cm^2$ provides close to $1\times10^{7}/cm^2$ recoils – similar to heavy ion coverage

| Proton Energy | Dose for $1\times10^{10}/cm^2$ | Dose for $1\times10^{11}/cm^2$ | Dose for $1\times10^{12}/cm^2$ |
|---|---|---|---|
| 50 MeV | 1.6 krad(Si) | 16 krad(Si) | 160 krad(Si) |
| 100 | 0.94 | 9.4 | 94 |
| 200 | 0.58 | 5.8 | 58 |
| 500 | 0.36 | 3.6 | 36 |

# Test Methods - I

- Verify the beam details by requesting beam diagnostic information from the operator
  - Radiochromic film, scan information, or other
- Ensure the test board(s) are positioned far enough away to expose all electronics.
- If multiple boards are used, may want to put Radiochromic film between each unit
  - But it measures dose, not particle fluence…

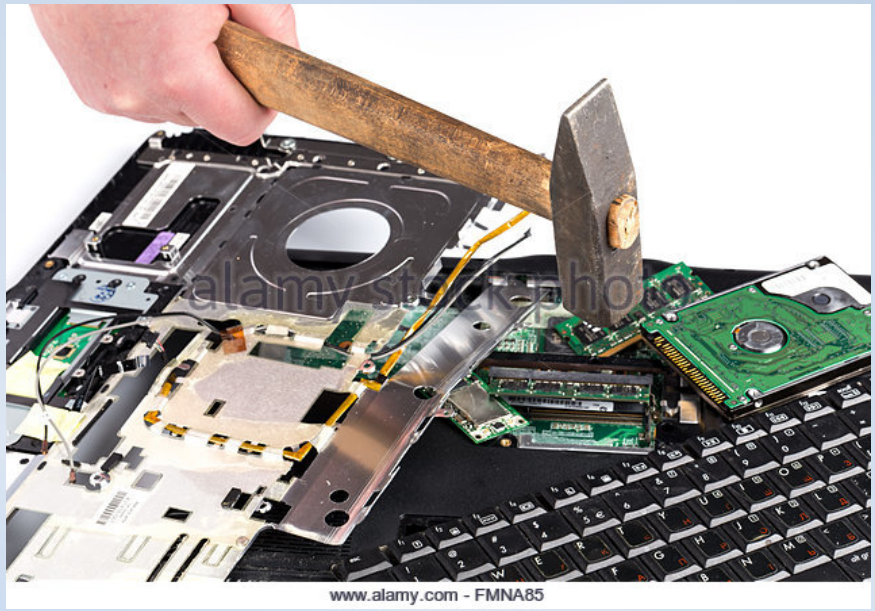

# Test Methods - II

- Operational test modes should be considered carefully
  - Test for normal system response (flight-like application) and recovery (if possible stop the beam during recovery)
    - Typically doesn't have good prognostics or diagnostics
  - Designs specifically for an accelerated test (design for test)
    - Identify errors and increase coverage – but requires careful development
- Try to observe as many error modes as possible
  - Strange, rare event types my be dangerous
    - If there is something rare that may cause a big operational problem, it is more important to study than 100s of events that are easily handled
  - But they may be test artifacts

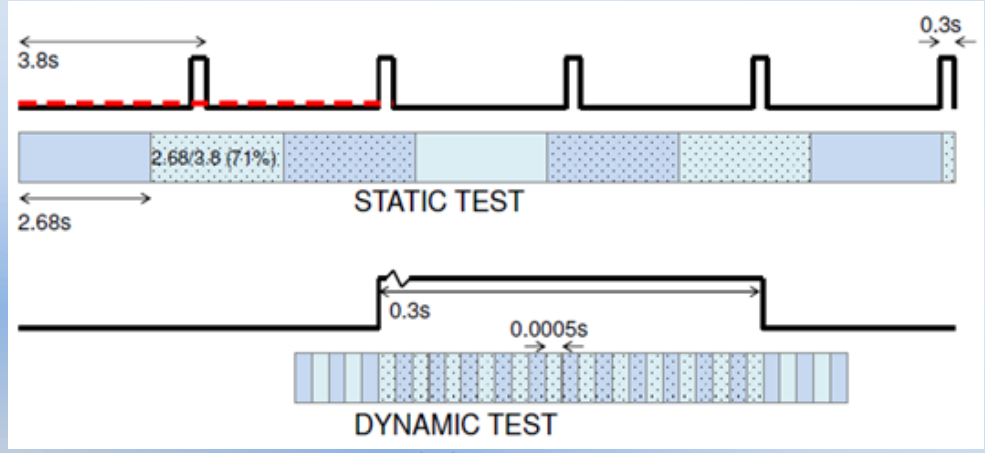


Guertin, RADECS Workshop, 2012

- Test operations should keep in mind the beam structure – i.e. synchrotron vs. cyclotron
  - For static tests, beam structure only really causes problems with figuring out live time.
  - But for dynamic tests, it is important that the test does not alias with the beam delivery…

# Finish Up

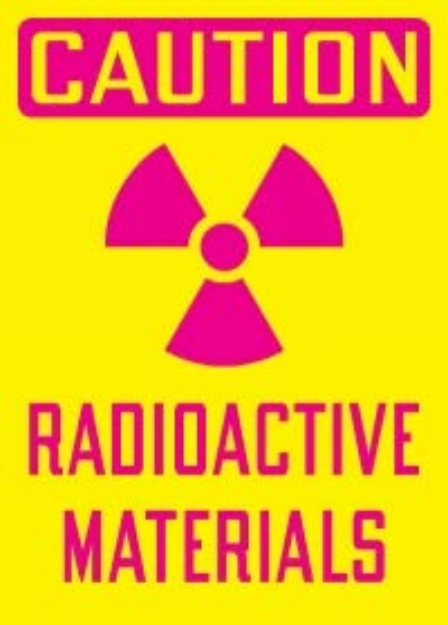


- Be prepared to not have your equipment for a couple weeks due to activation (months with $1\times10^{12}$)
  - Will be worse with higher energies and higher exposures
  - Shipping regulations vary, discuss with the test facility
- Ideally, a post-irradiation burn-in may help identify latent damage
- All observed error types should be documented before leaving the facility
- Obtain test logs, exposure information, and ensure any shipping or facility exit requirements are handled.

# Analysis & Theory

- For SEEs with less than 1-2μm SV depth
  - The relation between the number of events in a $1\times10^{10}/cm^2$ test, and the predicted rate for ISS, is estimated by the PROTEST code
  - Most bit upsets and SEFIs have this depth, but fluence dictates coverage of observed modes.
- For DSEE – SEL, SEB, and SEGR, the resulting rate is based on worst-case devices from sampling
  - If this was handled as a regular engineering problem, the hard limits could easily result in worse predictions than no testing (the secondary ions are weak and the device geometry is unknown).
  - But the likelihood of worst-case devices actually being in your design is hard to gauge.
- Specific rates based on fluence, number of observed events, and event type, are TBD (except for $1\times10^{10}/cm^2$ test for ISS)

# Future/Recommendations

- Limitations at this point…
- Alternate environments need improved study of cutoff LET and residual risk
  - Other LEO, GEO, and maybe surface of Mars?
  - Each SEE category would have different claims to be established

- It's all about statistics…
  - Recommendations about how to build with multiple architectures to avoid systematic problems?

# Conclusion

- Proton-only testing to “improve” assurance of systems has, and will be used – but it is potentially very limited in value.
  - Effective LET cutoff is low for damaging SEE
  - Ideally would test with at least $1\times10^{12}/cm^2$
- We need to make sure test methods are good to ensure the (limited) value of this type of testing is not compromised
  - Guideline in development
  - Configuration of test, collection of data, selection of fluence/etc.
- The theoretical limitations of this approach are significant, but the practical experience of test groups indicate that it can result in 10-100x improvement over predictions with no testing – for ISS orbit.